




Dominator Exhaust System Installation Instructions

For the:


HONDA CB 750 HORNET RH12

Full Exhaust System GPS Installation


- 1) Unhook marked lambda sensor's fastener out of the bracket and unscrew the sensor from the stock exhaust system.

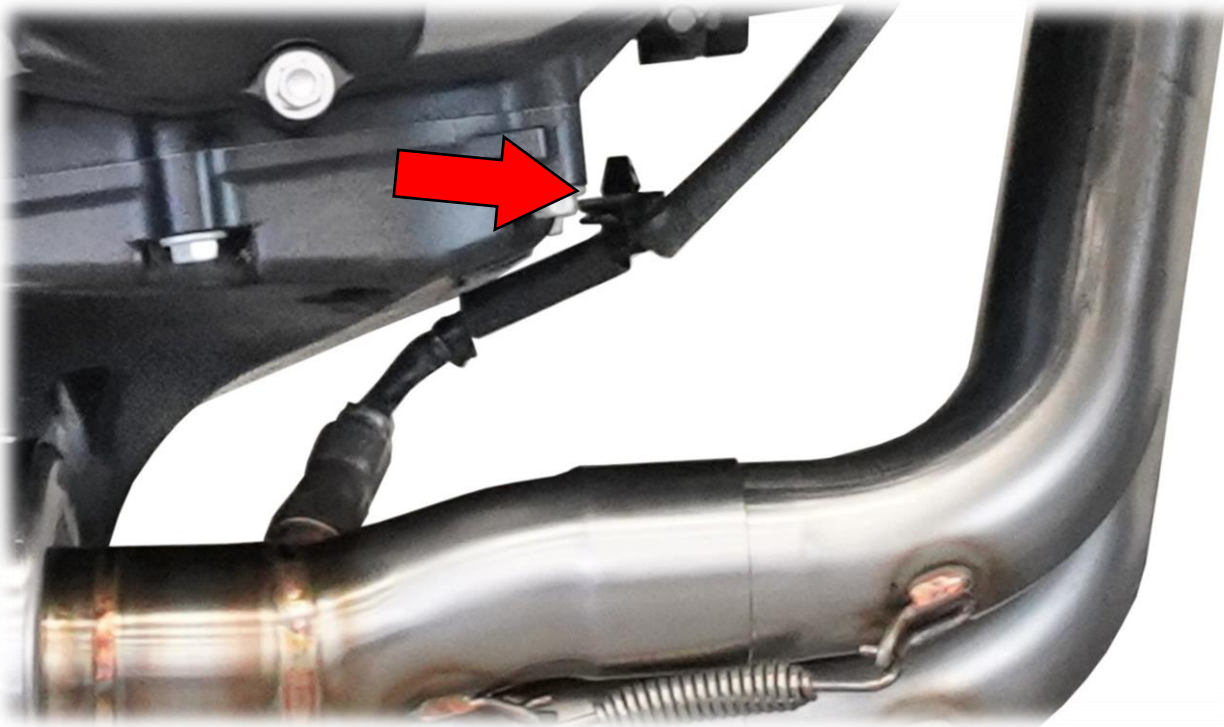

- 2) Uninstall the stock exhaust system.
- 3) Unscrew marked nuts from the linkage bolts.

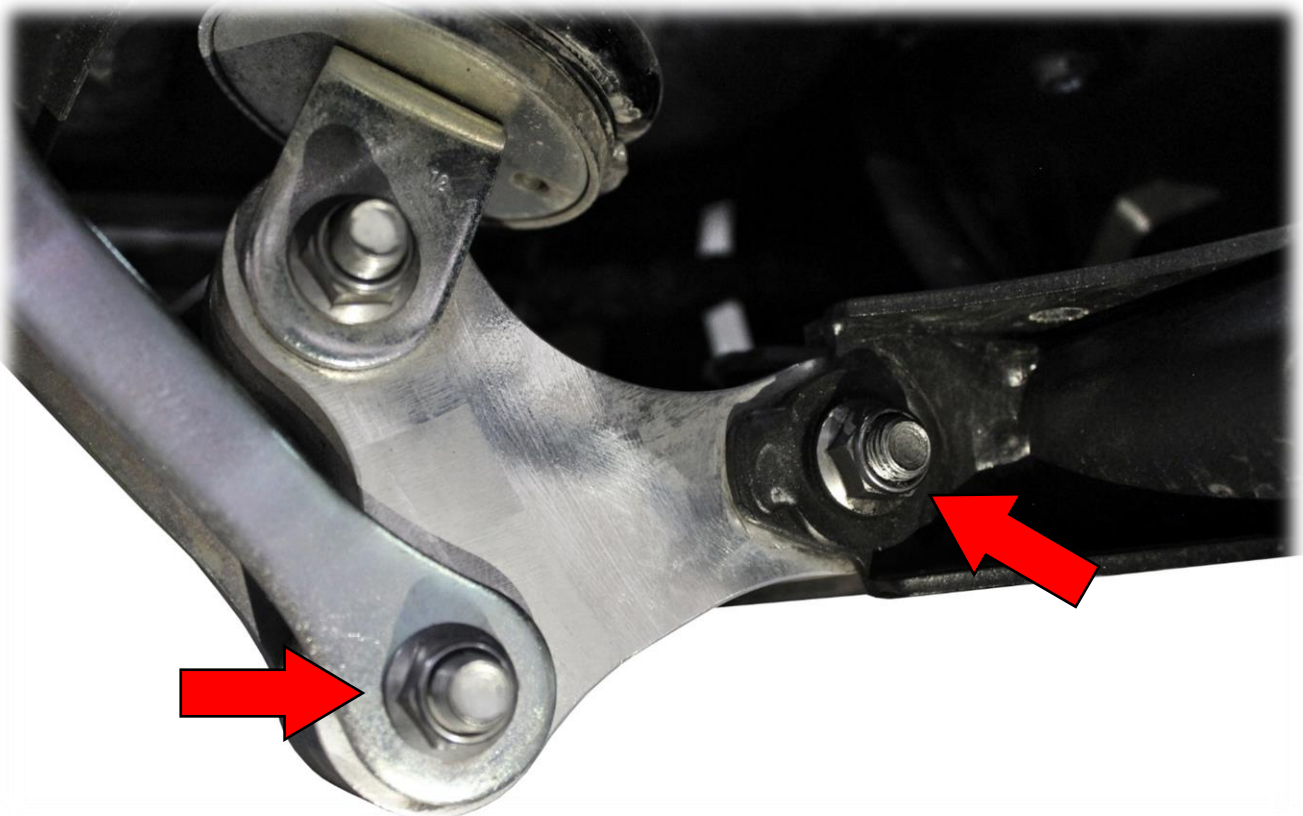


4) Support the motorcycle on a jack to allow the bottom bolt to be removed from the linkage.

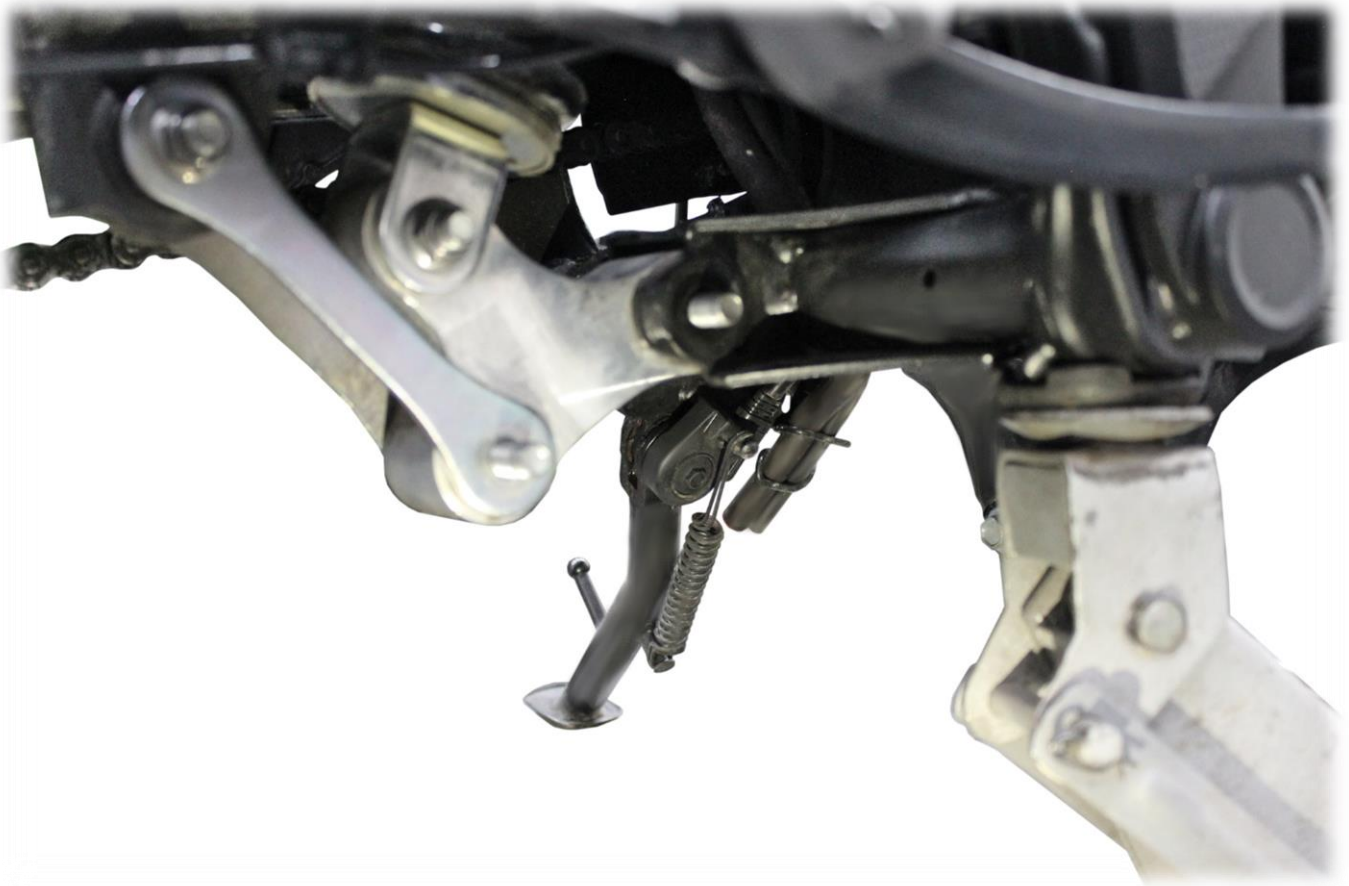


5) Remove the bottom bolt from the linkage, install it backwards and tighten the nut.



6) Bend the brake and ABS cables bracket in the marked direction.

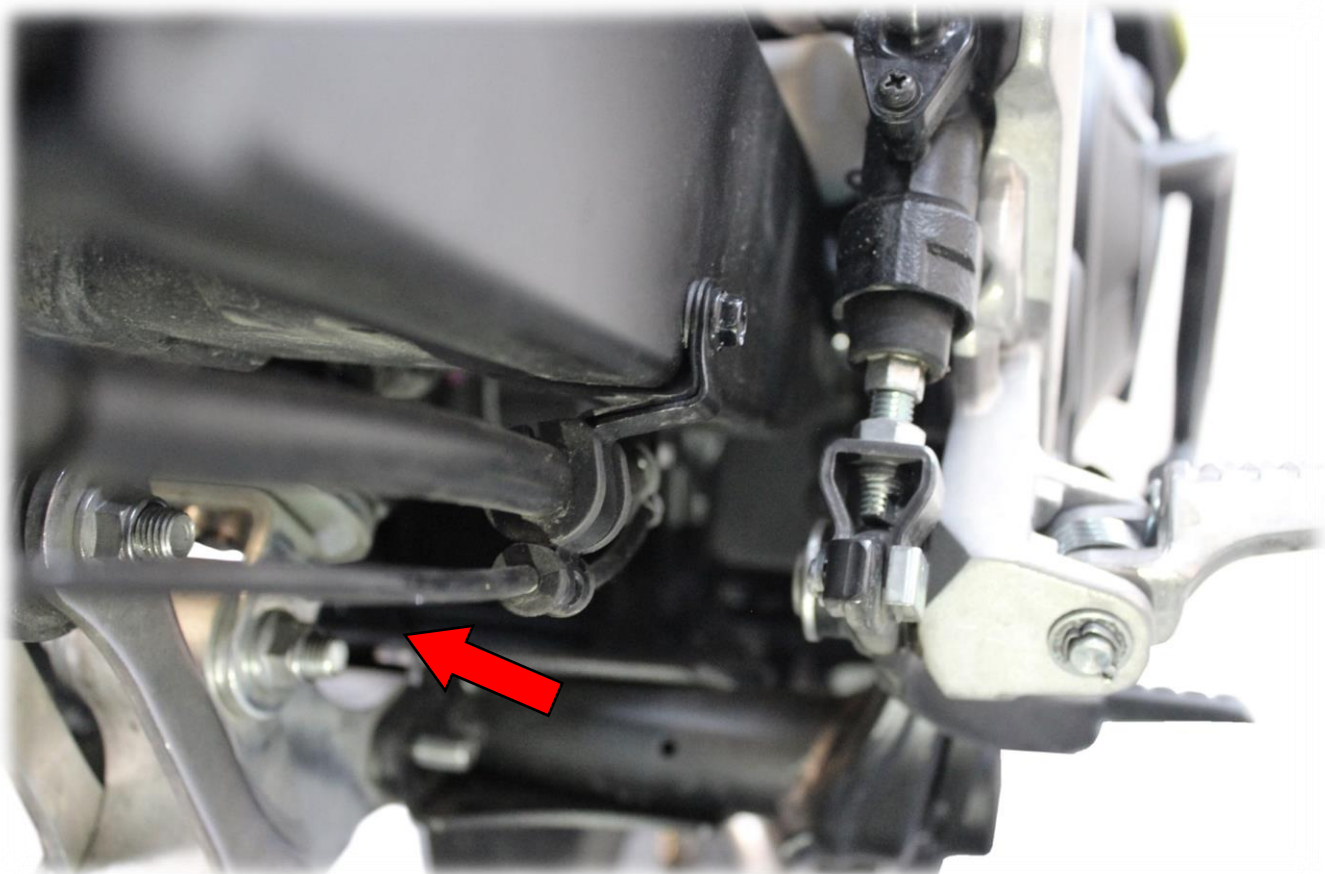

The gape width should be at least as shown in the picture (5 cm)

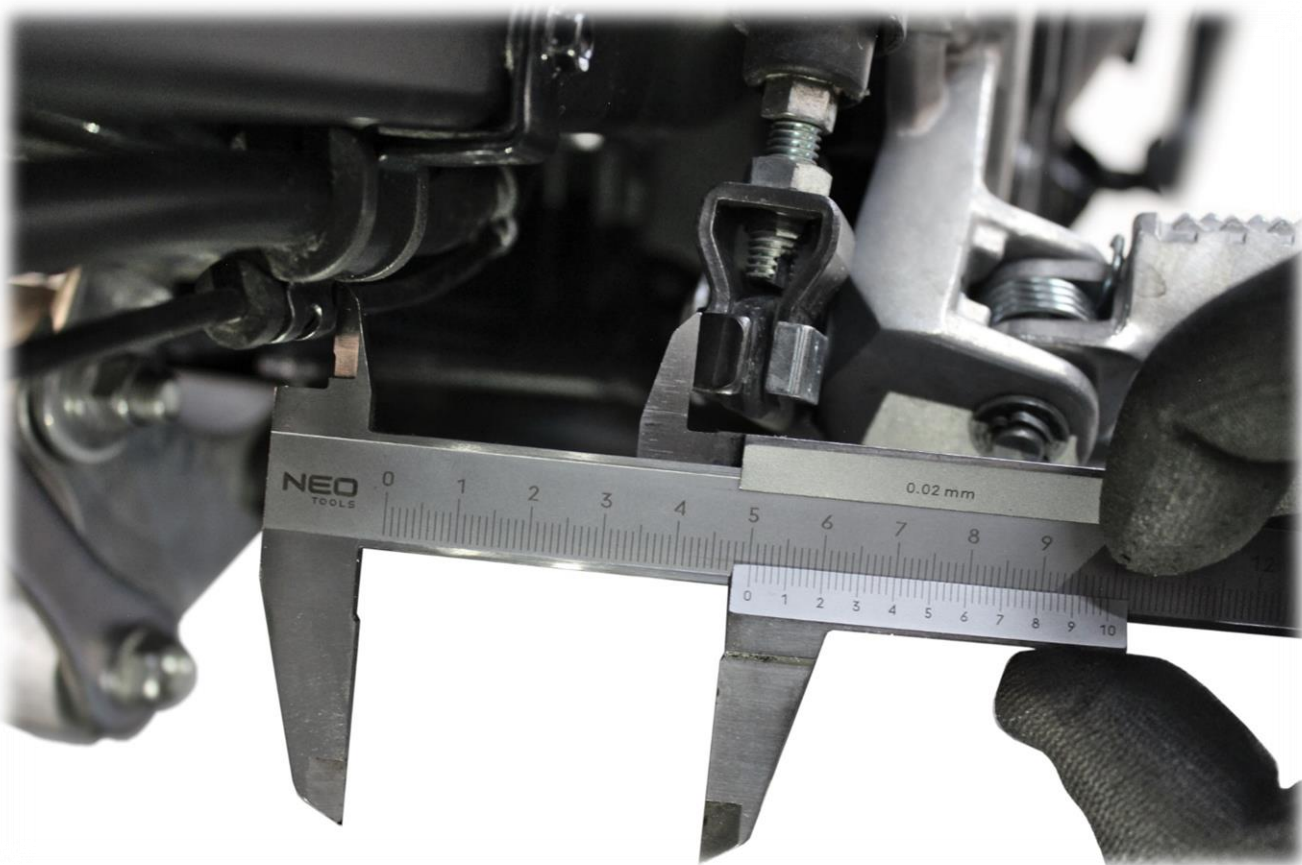

7) Put the header pipes into the rest of the Dominator Exhaust System and install the springs.



8) Insert the header pipes into the exhaust ports and lightly screw the nuts onto the studs.




9) Place the muffler hanger onto the linkage bolt and tighten the nut.



10) Tighten the nuts on the exhaust ports studs.



11) Screw the lambda sensor into the Dominator Exhaust System and hook the fastener back in the bracket.

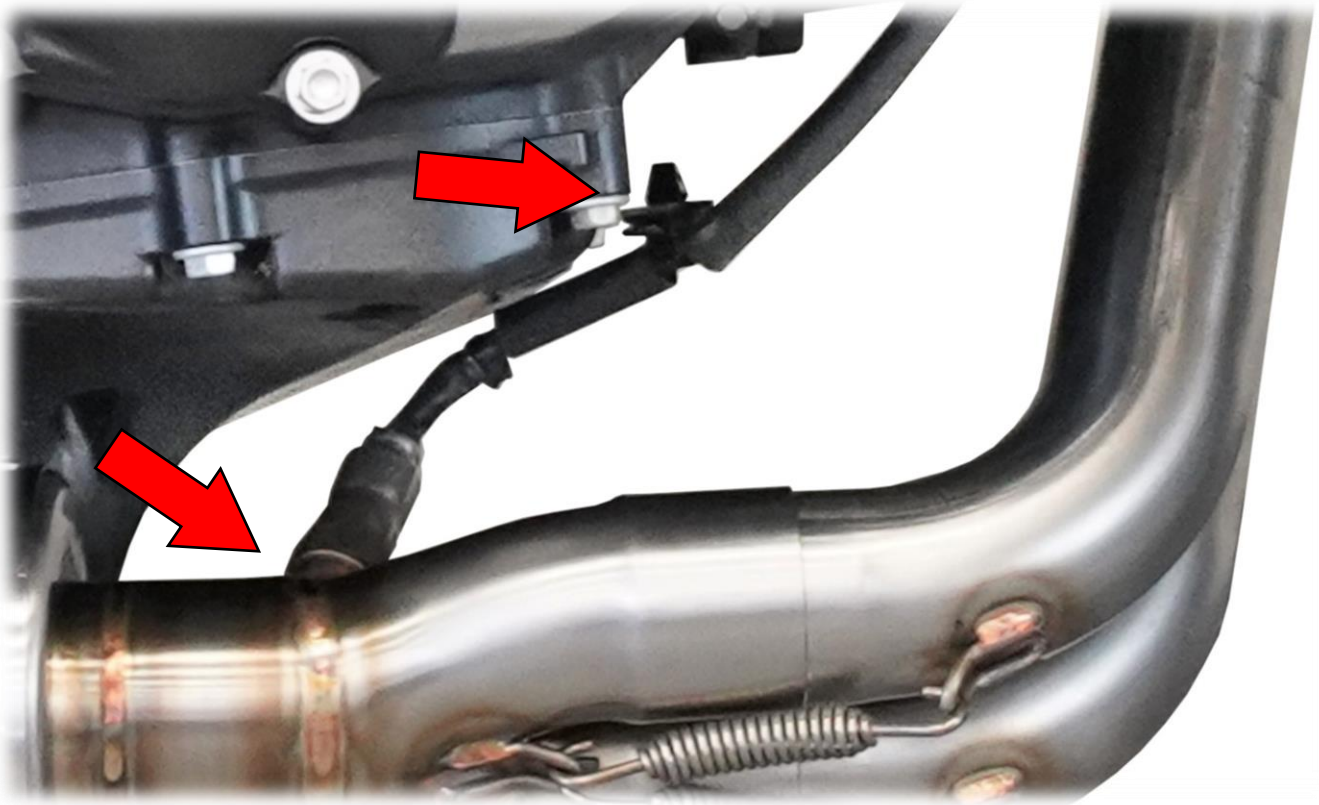

12) If everything has been done correctly, no part of the motorcycle should touch the muffler body





DOMINATOR**R**
EXHAUST SYSTEM